
BMW Service

Service Booklet

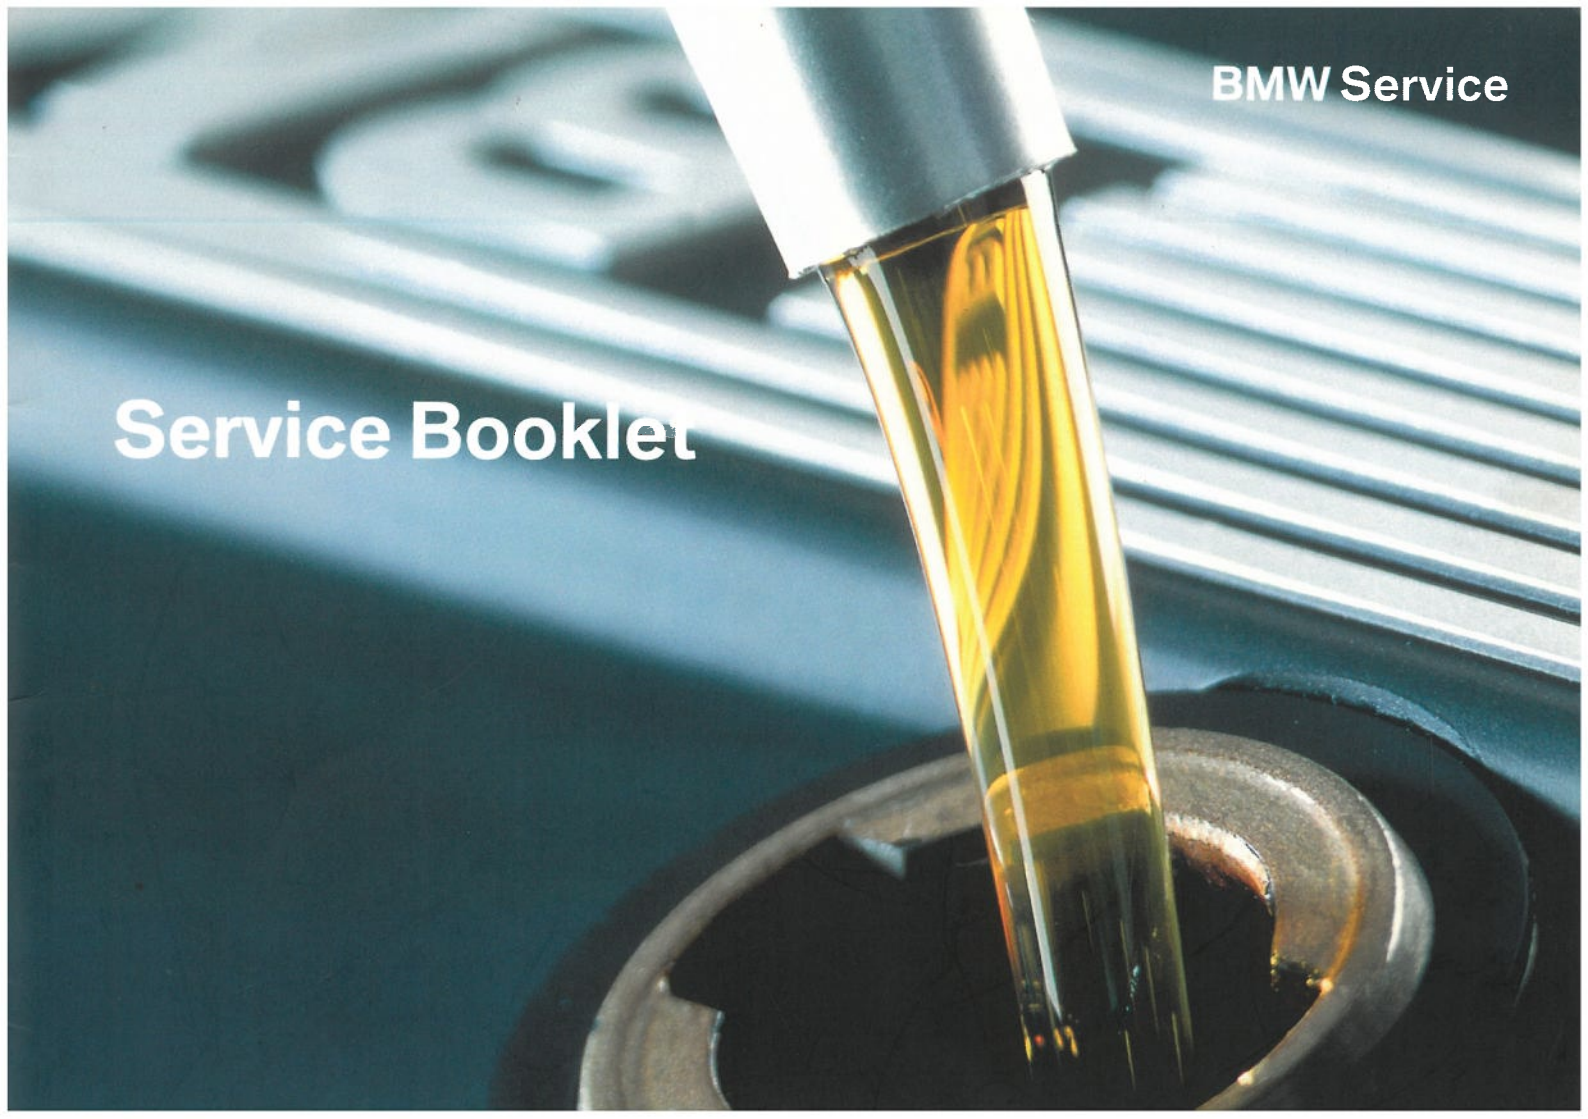

8 Evidence of maintenance work

Brake fluid

13/12/02 Date 6990 miles Distance reading 13/12/04 Next due	딜러 주소 10460 (자동차) BMW KOREA CO. LTD. 106-876 서울시 종로구 퇴계로 100 스테이트타워 남산 14층 Stamp and signature
13/3/04 Date 11,256. Distance reading 13/3/06. Next due	딜러 주소 10460 (자동차) BMW KOREA CO. LTD. 106-876 서울시 종로구 퇴계로 100 스테이트타워 남산 14층 Stamp and signature
12/3/06 Date 11,856. Distance reading 12/3/08 Next due	딜러 주소 10460 (자동차) BMW KOREA CO. LTD. 106-876 서울시 종로구 퇴계로 100 스테이트타워 남산 14층 Stamp and signature

Coolant

13/3/04 Date 11,256. Distance reading 13/3/08 Next due	딜러 주소 10460 (자동차) BMW KOREA CO. LTD. 106-876 서울시 종로구 퇴계로 100 스테이트타워 남산 14층 Stamp and signature
7/1/08. Date 12,234 Distance reading 7/1/12 Next due	딜러 주소 10460 (자동차) BMW KOREA CO. LTD. 106-876 서울시 종로구 퇴계로 100 스테이트타워 남산 14층 Stamp and signature
21/12/12 Date 31,545 Distance reading 21/1/16. Next due	ビーエム・ダブリュー東京 株式会社 勝どきサービス工場 〒104-0054 東京都中央区勝どき5-11-8 電話 (03)5560-3739 Stamp and signature

Evidence of maintenance work

Brake fluid

7/1/08 Date 12,234 Distance reading 7/1/10. Next due	딜러 주소 10460 (자동차) BMW KOREA CO. LTD. 106-876 서울시 종로구 퇴계로 100 스테이트타워 남산 14층 Stamp and signature
21/1/12 Date 31,545 Distance reading 21/1/14 Next due	ビーエム・ダブリュー東京 株式会社 勝どきサービス工場 〒104-0054 東京都中央区勝どき5-11-8 電話 (03)5560-3739 Stamp and signature
17/1/15 Date 35,542 Distance reading 17/1/17 Next due	ビーエム・ダブリュー東京 株式会社 勝どきサービス工場 〒104-0054 東京都中央区勝どき5-11-8 電話 (03)5560-3739 Stamp and signature

Coolant

Date Distance reading Next due	Stamp and signature
Date Distance reading Next due	Stamp and signature
Date Distance reading Next due	Stamp and signature

Evidence of maintenance work

✓ **Pre-delivery check**

performed according to manufacturer's directives



딜러 주소 10460 (자동차)
BMW KOREA CO. LTD.
106-876 서울시 종로구 퇴계로
100 스테이트타워 남산 14층

28/7/00

Date, stamp and signature

✓ **Running-in check**

at 2,000 km (approx. 1,200 miles)

1,279 MILES

Distance reading



딜러 주소 10460 (자동차)
BMW KOREA CO. LTD.
106-876 서울시 종로구 퇴계로
100 스테이트타워 남산 14층

4/12/00

Date, stamp and signature

✓ **Oil Service**

Inspection I

Inspection II

✓ **Microfilter**

Bodywork

3,678 MILES

Distance reading



딜러 주소 10460 (자동차)
BMW KOREA CO. LTD.
106-876 서울시 종로구 퇴계로
100 스테이트타워 남산 14층

30/7/01

Date, stamp and signature

14 Evidence of maintenance work

Oil Service	✓ Oil Service	Oil Service
✓ Inspection I	Inspection I	Inspection I
Inspection II	Inspection II	✓ Inspection II
Microfilter	✓ Microfilter	✓ Microfilter
Bodywork	Bodywork	✓ Bodywork
6990 MILES	10,461 MILES	11,256 MILES
Distance reading	Distance reading	Distance reading
딜러 주소 10460 (자동차) BMW KOREA CO. LTD. 106-876 서울시 종로구 퇴계로 100 스테이트타워 남산 14층	딜러 주소 10460 (자동차) BMW KOREA CO. LTD. 106-876 서울시 종로구 퇴계로 100 스테이트타워 남산 14층	딜러 주소 10460 (자동차) BMW KOREA CO. LTD. 106-876 서울시 종로구 퇴계로 100 스테이트타워 남산 14층
13/12/02	21/8/03	13/3/04
Date, stamp and signature	Date, stamp and signature	Date, stamp and signature

Evidence of maintenance work

✓ Oil Service	✓ Oil Service	✓ Oil Service
Inspection I	✓ Inspection I	Inspection I
Inspection II	Inspection II	Inspection II
Microfilter	✓ Microfilter	Microfilter
Bodywork	✓ Bodywork	Bodywork
11,856 MILES	12,234 MILES	13,297 MILES
Distance reading	Distance reading	Distance reading
딜러 주소 10460 (자동차) BMW KOREA CO. LTD. 106-876 서울시 중로구 퇴계로 100 스테이트타워 남산 14층	딜러 주소 10460 (자동차) BMW KOREA CO. LTD. 106-876 서울시 중로구 퇴계로 100 스테이트타워 남산 14층	ビーエム・ダブリュー東京 株式会社 勝どきサービス工場 〒104-0054 東京都中央区勝どき5-11-8 電話 (03)5560-3739
12/3/06	7/1/08	10/3/09
Date, stamp and signature	Date, stamp and signature	Date, stamp and signature

Evidence of maintenance work

Oil Service	✓ Oil Service	Oil Service
Inspection I	Inspection I	✓ Inspection I
✓ Inspection II	Inspection II	Inspection II
✓ Microfilter	Microfilter	✓ Microfilter
✓ Bodywork	Bodywork	Bodywork
31,545 MILES	31,595 MILES	35,542 MILES
Distance reading	Distance reading	Distance reading
ビーエム・ダブリュー東京 株式会社 勝どきサービス工場 〒104-0054 東京都中央区勝どき5-11-8 電話 (03)5560-3739	ビーエム・ダブリュー東京 株式会社 勝どきサービス工場 〒104-0054 東京都中央区勝どき5-11-8 電話 (03)5560-3739	ビーエム・ダブリュー東京 株式会社 勝どきサービス工場 〒104-0054 東京都中央区勝どき5-11-8 電話 (03)5560-3739
21/1/12	12/1/13	17/1/15
Date, stamp and signature	Date, stamp and signature	Date, stamp and signature

Evidence of maintenance work

Oil Service	X Oil Service	Oil Service
Inspection I	X Inspection I	Inspection I
✓ Inspection II	✓ Inspection II	Inspection II
Microfilter	X Microfilter	Microfilter
Bodywork	X Bodywork	Bodywork
60 489	72 227	
Distance reading	Distance reading	Distance reading
5/7/16	18/09/2020	
Date, stamp and signature	Date, stamp and signature	Date, stamp and signature


GINION WAVRE 2016 BMW 2016 1300 WAVRE

GINION WAVRE 2020 BMW 2020 1300 WAVRE

Notice d'utilisation de la voiture
Répertoire alphabétique.
Le plaisir de conduire.



Commutateur combiné

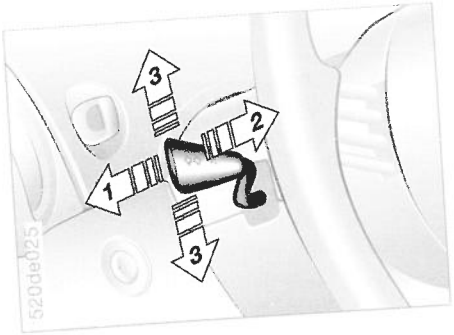

Feux de route/ feux de stationnement

1 Feux de route (voyant bleu)


2 Appels de phares (voyant de contrôle bleu)

3 Feux de stationnement

Feux de stationnement gauches ou droits

Avec clé de contact en position 0, pousser la manette dans la position de clignotement voulue.


Feu arrière de brouillard

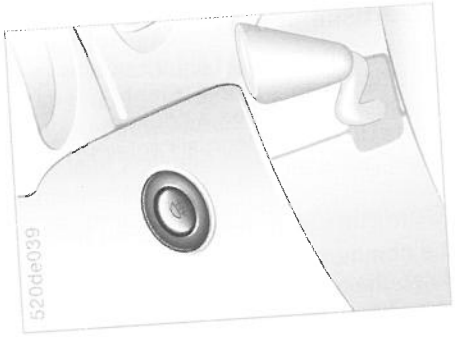

Le témoin jaune du combiné d'instruments est allumé lorsque le feu arrière de brouillard est allumé.

Veuillez respecter les dispositions légales concernant l'utilisation des feux antibrouillard.

Eclairage intérieur

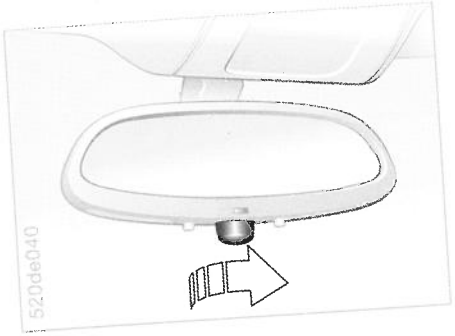

L'éclairage intérieur est commandé automatiquement.

Allumage et extinction de l'éclairage intérieur

Tourner le bouton.

Si le plafonnier doit rester éteint en permanence, tourner le bouton et le maintenir pendant 3 secondes environ.

Pour supprimer ce mode de fonctionnement, tourner à nouveau le bouton.

Feux d'éclairage de plancher

Les lampes situées au niveau du plancher fonctionnent comme l'éclairage intérieur.

Owner's Handbook
for Vehicle



BS

raking with ABS

ne system functions from about
0 km/h (6.2 mph). Below about 6 km/h
3.7 mph), it stops operating. The
wheels can therefore theoretically tend
to lock during the final stages of braking
action. However, in practice, this is not
considered to be critical.

You use ABS most effectively by
applying maximum brake pressure in
situations which call for this – full
braking. Since the car remains steer-
able, you can avoid obstacles by
turning the steering wheel as smoothly
as possible.

The ABS regulation cycle takes place
within fractions of a second. A pulsating
sensation is felt at the brake pedal, and
together with the noise caused by the
hydraulic regulating action this tells you
that you are in the tyre grip limit zone
and reminds you to modify your driving
style to suit road conditions.

On roads with loose surfaces on a firm
base, e.g. on gravel or snow, and when
driving with snow chains, you may find
the braking distance is greater than
when the wheels are locked. However,
the advantages of greater stability and
the ability to steer while braking are still
available to the driver.

Information for your safety

Even ABS is unable to overcome the
laws of physics. Please note that you
remain responsible for the conse-
quences of braking too close to other
vehicles, from too high a speed or if
your car is aquaplaning. The additional
safety afforded by ABS should not
tempt you into taking risks.

Make no modifications to the ABS
system.
All work on the ABS should be
entrusted only to skilled, authorised
personnel.◀

In the event of a fault:

If the ABS warning light comes
on, refer to page 19. The brake
system then operates as it
would in cars not fitted with ABS.
Arrange to have this examined by BMW
Service as soon as possible. Additional
brake system faults could otherwise
occur without being noticeable.

Cornering Brake Control (CBC)

CBC is an advanced form of ABS.
When the brakes are applied while cor-
nering under high lateral acceleration
and when changing lanes, the vehicle's
stability is further enhanced.

DBC

Dynamic Brake

If the brake peda
idly, this system
the braking force
thus helps to pu
shortest possibl
brake applicatio
makes full use
offered by ABS

Maintain press
during the ent
the brake ped
switched off.

Informatio

Even DBC is
laws of phys
remain resp
quences of
vehicles, fr
your car is
safety affo
tempt you