MINI cooper

and

Cooper 'S'

Driver's Handbook




A BMC PUBLICATION


Stop/tail and flashing indicator lamps

When it is necessary to renew a bulb, withdraw the three screws to release the lamp lenses.

The flashing indicator bulb is fitted in the top and the stop/tail light bulb in the lower compartment. The latter is of the double-filament type giving a marked increase in illumination on brake application to provide a stop warning. This bulb also has offset locating pins to ensure correct replacement.

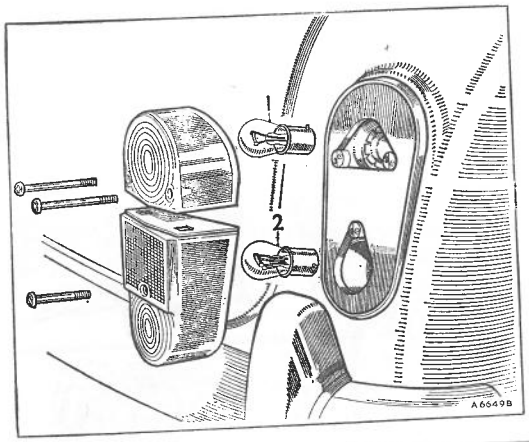

The stop, tail, and flashing indicator lamp with the lenses removed, showing the direction indicator bulb (1) *and the stop/tail lamp bulb* (2)

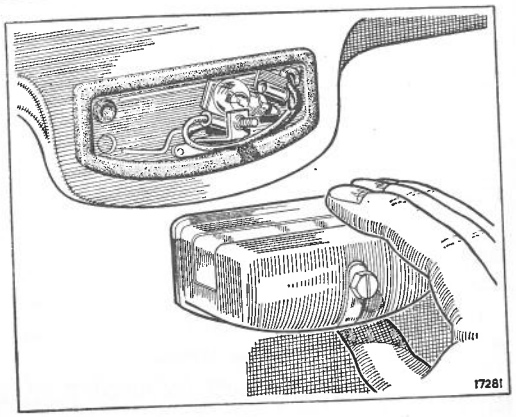

The number-plate lamp cover removed, giving access to the bulb

Number-plate lamp

The number-plate lamp operates only when the pilot lamps and tail lamps are switched on. Access to the bulb is obtained by unscrewing the slotted screw to release the domed cover.

Interior lamp

To renew a bulb, squeeze the forward and rear faces of the plastic lens together until the retaining lugs on the lens are clear of the sockets in the lamp base. The lens can then be withdrawn and the festoon-type bulb pulled out of its holder.