JAGUAR

XJS

DRIVERS

HANDBOOK


Cigar-Lighter (Fig. 10)

The cigar lighter for the driver and front seat passenger is located in the centre console panel. It is operated by depressing the knob which will remain depressed until it pops out ready for use.

Never hold the lighter knob in. Do not use a pin or other sharp instrument to remove tobacco particles, as the element is self cleaning.

The cigar lighter holder can also be used to provide a trickle charge point for the battery, or as a feed for an inspection lamp. A plug for this purpose together with fitting instructions will be found in the glove box.

Fig. 10

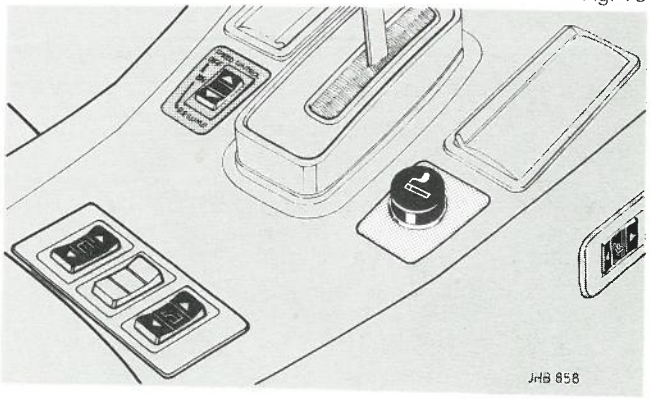



Fuel cut-off Inertia Switch (Fig. 11)

An inertia switch is fitted in the electrical supply to the fuel pump. Should the vehicle be subjected to heavy impact forces, the switch opens, isolating the fuel pump. To reset, depress the button which protrudes through the top of the cover.

The switch is located in the driver's footwell on the front door pillar.

Fig. 11

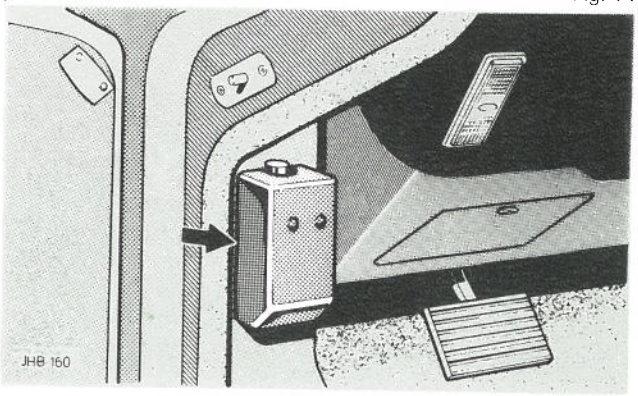

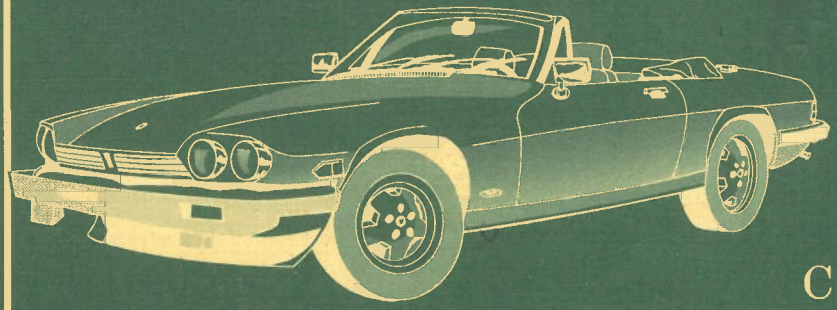

JAGUAR XJ-S

CONVERTIBLE

by

HESS & EISENHARDT

Coachbuilders Est. 1876

Owner's Manual

OPERATING INSTRUCTIONS

8. Position latch hook of the top lock handle to striker plate catch on windshield header.
9. Close top lock handle to secure top. Push on to header to verify that the top is secure.

Lowering/Raising Top Manually (No Power)

1. Open trunk and locate hydraulic by-pass valve, as shown in Figure 8.
2. Turn by-pass valve counterclockwise to open. This by-passes the hydraulic system.
3. Raise or lower top manually.
4. Turn by-pass valve clockwise to close valve.

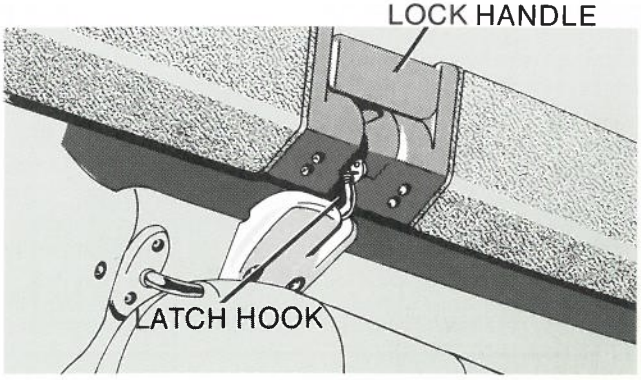


Figure 7 Securing the Top to the Windshield Header

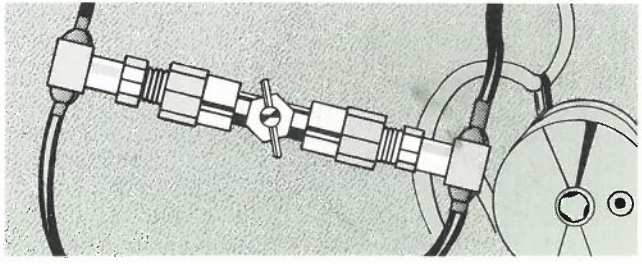


Figure 8 Hydraulic By-Pass Valve