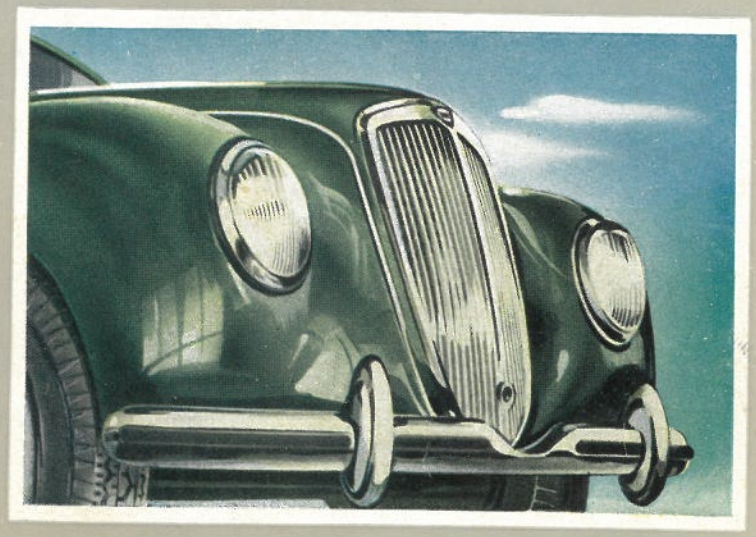


AVRELIA

USO E MANUTENZIONE

PROVVISORIO

		motore	B 10		B 21	
Regolazione carburat.	diffusori	mm.	22	23	23	24
	getti principali	mm.	1,10	1,15	1,15	1,20
	getti emulsionatori	mm.	2,70		2,70	2,60
	getti del minimo	mm.	0,45		0,45	
	getto del disp. avv.	mm.	1,40		1,40	
Comandi	acceleratore: al piede con pedalino a destra del pedale freno, a mano con levetta sotto il cruscotto a sinistra della guida					
	dispositivo di avviamento: a mano sotto il cruscotto.					
Filtro aria silenziatore	sopra il carburatore.					

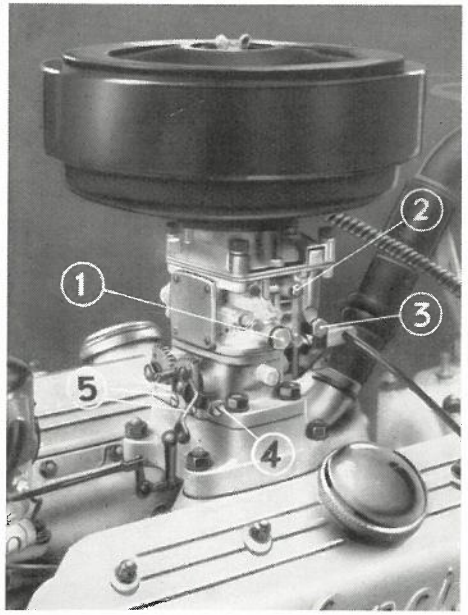


Figura 1 - Posizione getti e comandi carburatore

1. Getto principale dei cilindri di destra (dall'altra parte quello dei cilindri di sinistra) - 2. Getto del minimo dei cilindri di destra (dall'altra parte quello dei cilindri di sinistra) - 3. Getto del dispositivo di avviamento - 4. Vite regolazione apertura farfalla - 5. Vite regolazione del minimo.

Regolazione del minimo — Svitare la vite (4) regolazione apertura farfalle, finchè queste risultino completamente chiuse e quindi avvitarla di mezzo giro circa. Svitare le due viti (5) di regolazione del mi-



Variations to the

AVRELIA

INSTRUCTION BOOK

Attached to the (3° 1952) Edition

TECHNICAL ASSISTANCE DPT. Letter-Press No. 001131 (7-53-300)

Tipografia Torinese - Via Elba 5 - Torino


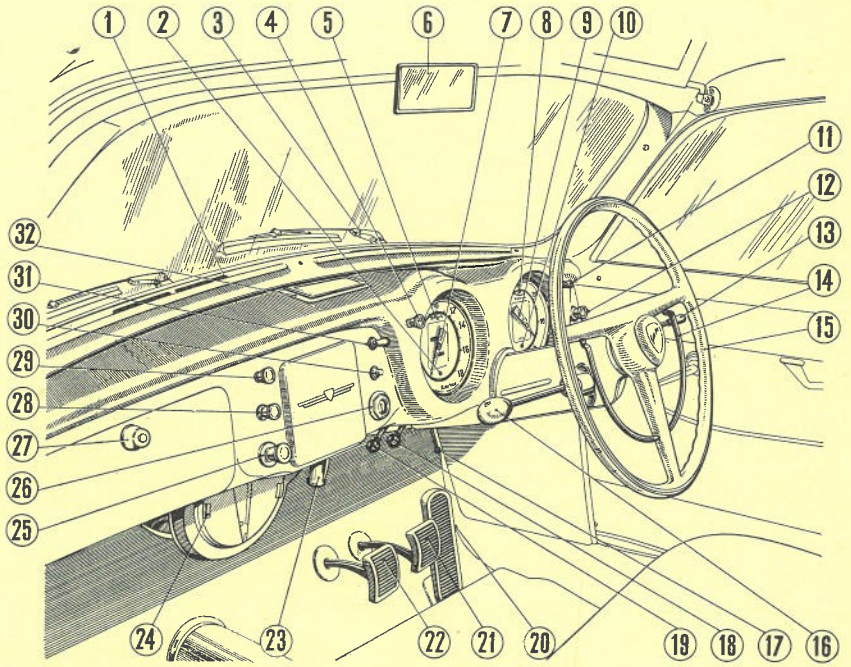


Fig. 3 - Instruments and Controls

1. Air intake - 2. Dynamo warning light - 3. Windscreen wiper - 4. Interior lighting control knob. - 5. Petrol level indicator - 6. Driving mirror - 7. Mileometer and speedometer - 8. Oil pressure gauge - 9. Revolution indicator - 10. Direction indicator warning light - 11. Windscreen wiper control knob - 12. Fog lamp control - 13. Head lights change-over control - 14. Control sector of electric horn - 15. Steering wheel - 16. Gear control lever - 17. Speedometer trip control - 18. Carburettor starting device control - 19. Accelerator hand control - 20. Accelerator pedal - 21. Hydraulic brake pedal - 22. Clutch pedal - 23. Hand brake pedal - 24. Heater - 25. Cigar-lighter - 26. Key switch for engine ignition and services - 27. Glove locker - 28. Heater control knob - 29. External and instrument panel lighting control - 30. Starter motor push button control - 31. Direction indicators control - 32. Ash-tray.

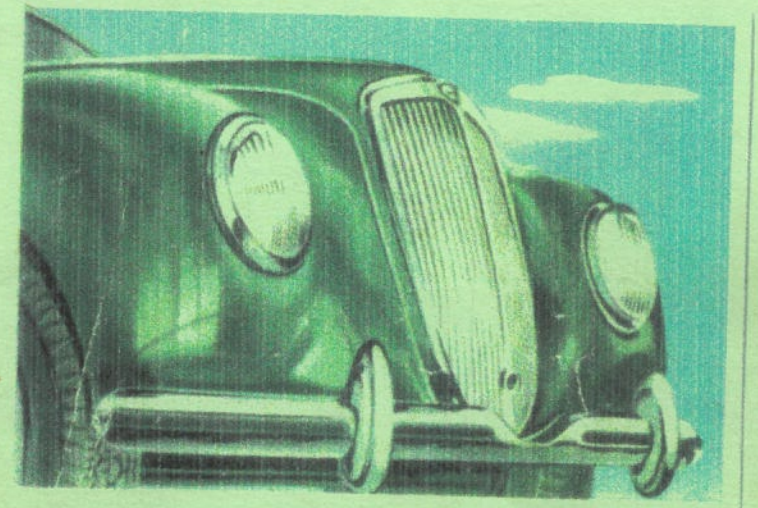

AVRELIA

INSTRUCTION BOOK

Wheel lubrication	Front: remove hub and fill three-quarters full with the prescribed grease. Rear: pressure greasers on hub of suspension arms.
Spare wheel	Tyre pressure: 1.6 Kg./sq.cm. (23 lbs. per sq. in.); at least every 4 months fit spare wheel on, keeping to usual rotation of position of the four wheels.

ELECTRICAL EQUIPMENT

Type	12–volt battery with negative earth.
Dynamo	200 W Marelli DN 22 A–200/12/1700D, on left side of engine.
Regulator	On the dynamo.
Dynamo warning light	On left side of oil pressure and petrol gauge panel. Special 12–1.2 H bulb, which lights up when engine stops, with key in second position (vertical) and goes out when engine is running, when the dynamo begins to charge the battery.
Battery	12–volt—48 Amp./hour, on dashboard under bonnet.
Fuse boxes	Under bonnet, on right-hand side: 10 fuses for the various circuits, as indicated on fuse box cover.
Key switch	On instrument board; same key also locks driver's door. Insert key and then turn clockwise—in 1st position (horizontal) it connects up battery and all electrical services; in 2nd position (vertical) it connects starter-motor and ignition.

AVRELIA

CATALOGO PARTI DI RICAMBIO

II^a Edizione - Gennaio 1954

Questo Catalogo comprende in volume unico la precedente 1^a edizione 1951, le successive ristampe 1952 - 1953, il Supplemento (stampato n. 004-104), ed è aggiornato a tutte le varianti parti di ricambio AURELIA pubblicate fino a Notiziario n. 8 1953.

LANCIA & C. - FABBRICA AUTOMOBILI - TORINO - S. p. A.

MOTORE

SCHEMA DI ALIMENTAZIONE E DI SCARICO (2)

Tav. 10 bis

